


INSTALLATION INSTRUCTION

I、The profile of installation

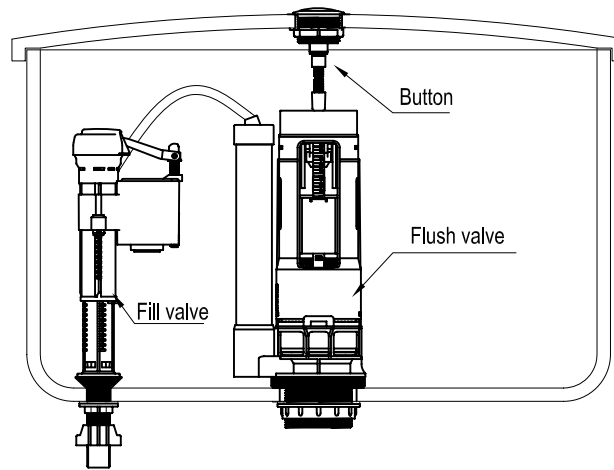


II、Steps


1>Preparation

Pls clean the tank and pipe concerned if it is old one.


2>Installation

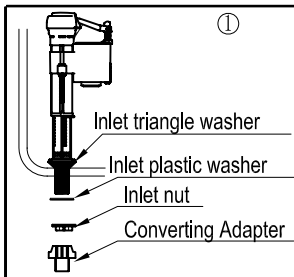


Pls twist the screw and adapter out of threads and take out the washer firstly; Then put the valve into the tank inlet hole and take the triangle washer into the threads; And then adjust the inlet valve to be right position and screw into the nut and adapter tightly.

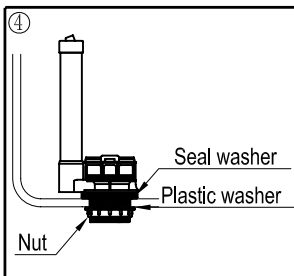


Screw the nut out of threads and take out of washers; Put the base into the tank hole and adjust to be the right position; And then screw the nut and seal washer into the threads, meanwhile keep the seal on the tank hole tightly.

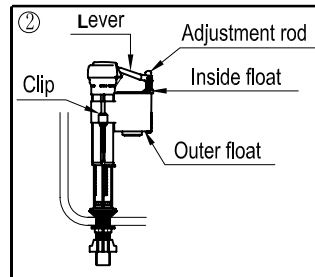


Water lever adjustment: Take out the clip and adjust outer float to be right position and into the clip; Twist the adjustable rod to make it be vertical.

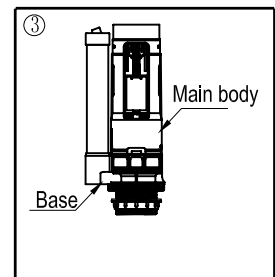

Twist the main body out of the base.

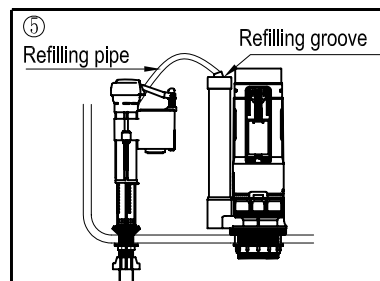

Put the flush valve into the base and take the refilling pipe into the groove.

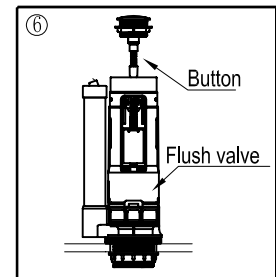

Insert the button into the hole and turn and adjust it to be right height; Make the rod just touch the flush valve.

IV、Clear problems

1、The flush valve

NO.	Abnormal issues	Possible reason	Method
1	leak water in outlet	Not fixed well of valve	Screw tightly
2	leak of flush valve	Broken in washer or defection of seal washer	Change washers
3	No work of flush Valve or flushing less	The shorter of button rod	Adjust the length of rod

2、The fill valve

No.	Abnormal issues	Possible reason	Method
1	Valve does not fill the tank	Supply line jamed or floats is held up in water stopping position	Clean debris in supply line, adjust the float position
2	Higher or lower of Water lever	The higher or lower of the float	Take off the clip and downward The rod; Up or down rod and fix clip again
3	Leak of inlet	Loose of screw or defection Of toilet hole	Tight inlet screw or fix the toilet
4	Water stop not up Outer float	Dirty in bottom of outer float	Maintenance
5	The longer or shorter Time of entering water	The higher or lower pressure in supplying pipe	Adjustment of pressure concerned
6	Interfere of Refilling pipe With other Accessories	Not right position of inlet direction	Adjustment in exact position

Pls give the instruction to the final consumer;

Pls regard the products as real careless of discrepancy as indicated pictures